


## Oil type for damper

Up to model year 1976		ATF	Refer to specifications for service products page 236.4
Starting model year 1977	Summer	Engine oil	Refer to specifications for service products page 226 or 225.1 or job No. 151/5
	Winter	ATF	Refer to specifications for service products page 236.4

## With oil reservoir

- Check oil level in reservoir and top up.

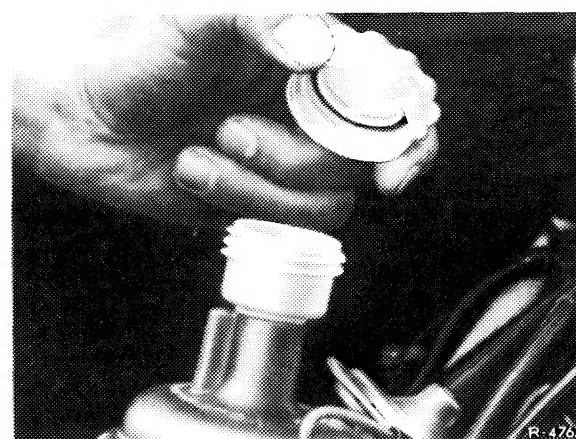

## Without oil reservoir

- Unscrew plug and remove damper. The oil must reach up to the upper edge of the piston pin (see arrow).

